

Stand

Adjustment

To adjust the height of the stand, loosen the locking collar by turning it anti-clockwise then raise the stand to the desired height. Align the centre of the glass with the speaker's eye line.



Locking Collar





To adjust the angle of the glass, turn the adjustment knob while supporting the weight of the glass and set the glass angle to approximately 45°. The image should be in the centre of the glass

Display Compatibility





Autocue

PSP 17" Monitor

SSP 17" Monitor


autocue .com

Manual Conference System Guide



Autocue

Components

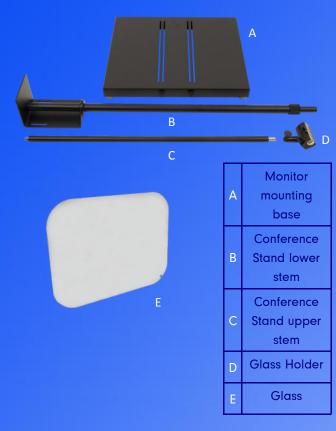

Assembly



1. Secure the lower glass stem to the monitor mounting base using the two thumbscrews.

2. Mount the upper stem to the lower stem by screwing the two components together.



the upper stem and secure by tightening the thumb screw (A)

4. Install the glass by inserting It into the clamp and secure in place by tightening the clamp knob. (A) The blue dot should face the speaker.



3. Mount the glass holder to

Completed unit

Monitor Mounting

Place the monitor on a flat surface with the monitor fixing holes facing upwards and secure the monitor mounting base using four screws.

Note: MSP Monitors do not need fixing to the monitor mounting base.



Autocue