

Mounting the Camera



Mount the camera to the camera mounting bracket using the 1/4" BSW camera screw, slide the camera forward and ensure that the lens is inside the hood. Use the hood slide screw to centre the lens inside the hood and place the black light excluder around the lens. Secure it using the drawstring.

Camera Balancing



Loosen the two screws (marked A in the picture) so that the hot shoe plate will slide back and forth.

Mount the unit with camera attached to the tripod and slide the unit back and forth until you achieve a balance.

Then retighten the screws.



autocue.com

Autocue

Straight-read Assembly



1. Place your SSPi on a smooth, level surface. Remove the thumbscrews holding the hood and iPhone mounting plate.



2. Remove the two thumbscrews attaching the iPhone mounting bracket to the drop bracket.



3. Remove the knob securing the iPhone carrier to the iPhone carrier mounting bracket.



4. Align the bolt on the back of the iPhone carrier with the hole in the centre of the drop bracket.



5. Secure it to the drop plate with the knob.



6. Attach an optional pistol grip to the hot shoe plate on the underside of the SSPi unit.



7. Now attach your camera to the camera mounting bracket using the screw supplied.



Camera screw

SSPi

iPhone Prompter

Guide



Autocue

Components



A	Hood and glass
B	iPhone carrier
C	Hood Bracket
D	Camera Bracket
E	Hot Shoe Plate
F	Drop Bracket
G	Carrier mounting plate
H	Hood thumbscrew
I	Hood Slide Screw

Assembly

1. Remove the unit from its case and carefully place the glass side face down, onto a level surface.



2. Loosen the thumbscrews holding the iPhone carrier mounting plate and raise the iPhone carrier.

3. Align the metal tongue of the iPhone carrier plate with the slot in the drop bracket and carefully insert the tongue into the slot. (fig. i)

4. Tighten the thumbscrews to secure the iPhone carrier mounting plate. (fig. ii)

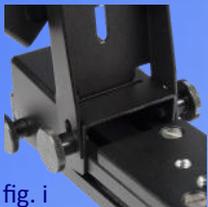


fig. i

fig. ii

5. Attach the tripod camera mounting plate to the hot shoe plate on the underside of the SSPi unit.



6. Slide the on-camera unit onto your tripod.



7. Loosen the two thumbscrews holding the iPhone carrier mounting plate and hood assembly.

8. Raise the hood assembly to the vertical position and tighten the thumbscrews.



Vertical position

9. Rotate the camera bracket so that it is on the top of the unit and behind the hood.



11. Fit your iPhone into the iPhone carrier by loosening the knob on the underside. Slide the two components apart, then close ensuring the corners of the iPhone are held securely by the carrier.



10. Fix your camera to the bracket using the camera screw. Slot the bracket over the thumbscrews and tighten all four thumbscrews to secure it.